




W360/W500

Quick Start Guide

Setting Up W360/W500 (TG/ TEX)


1. Push & Lock Track Adapter into the Track

G-Type Track (-TG)

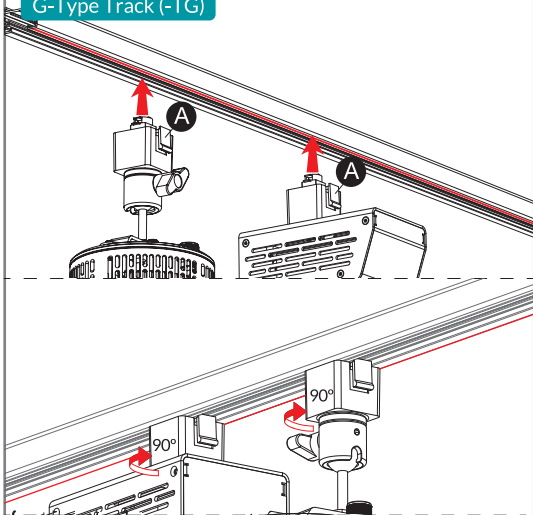


- Hold the power supply / light fixture below the track and press down on the locking tab (A). Ensure the locking tab is positioned and aligned directly below the polarity line (Indicated in red).
- Push the power supply / light fixture into the track. Rotate the track adapter 90° counterclockwise until you hearing a "snap".

E-Type Track w/ DMX (-TEX)

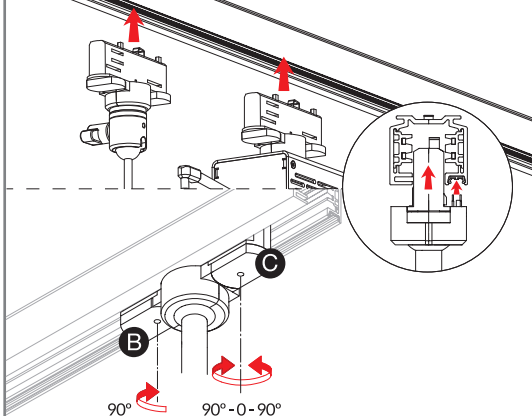

- Insert the TEX adapter into the track with databus. Make sure to align the conductors of databus on the TEX adapter to the databus circuit on the track.
- Turn Locking Tab (B) 90° clockwise to lock the adapter in position.
- Turn Circuit Tab (C) 90° clockwise/counterclockwise to connect the adapter to the desired circuit.

2. Connect the Power Cord

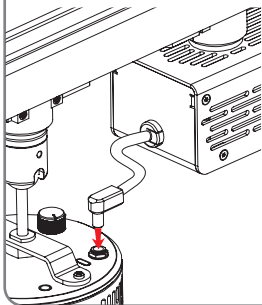

- Connect the power supply DC cord to the light fixture.
- Once assembly is complete, turn on track power and turn the intensity knob on the light fixture to confirm it is operational.
- Adjust the fixture to the desired angle using the ball joint.

1689 Regatta Blvd., Richmond, CA 94804 (510) 620-5250

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.